

Installation Manual

Multicollar Slim



1

Make sure that the service penetration and the gap are free from dust, dirt and grease.

6

Cut the inlay obliquely away with a knife on both sides of the custom-size fire collar.

2

Openings $\leq 20 \text{ mm}$ ¹⁾ can be sealed with Multisealant A firestop acrylic sealant or Multimastic SP firestop mastic, over a depth of 10 mm.

7

If the stainless-steel joints fit well together, the inlay has been properly cut.

3

Measure the diameter of the service penetration. See the application table on the packaging (for plastic tubes²⁾ for the length of Multicollar Slim (number of segments) and the Multiclips required.

Ø Pipe	Segments	Multiclip
50	10	2
52	11	2
56	16	2
63	19	2
76	22	2
80	23	2
100	28	2
102	27	2

8

Place the fire collar around the service penetration, attach the end of the fire collar with a Multiclip and secure with the screws provided.

4

Count the number of Multicollar Slim segments required on the roll and then cut through the inlay with a knife.

9

Distribute the remaining Multiclips proportionally and secure with screws.

5

Break the Multicollar Slim where it has been cut.

10

Fill in the conformity statement and paste it next to the fireproof seal.

¹⁾ Larger openings around service penetrations can be sealed according to the installation requirements for the Multimastic C System or the Multimortar System.
²⁾ Steel pipes with insulation, depending on the fire resistance, can be provided with a single fire collar up to a total diameter of 283 mm.



For use and for more information about an application, refer to the Mulcol documentation, local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at www.mulcol.com
 For professional use only.

